


卫生许可:
生产日期:
保质期:
净含量:
储存方法:
执行标准



Automatic Cosmetic Dispenser

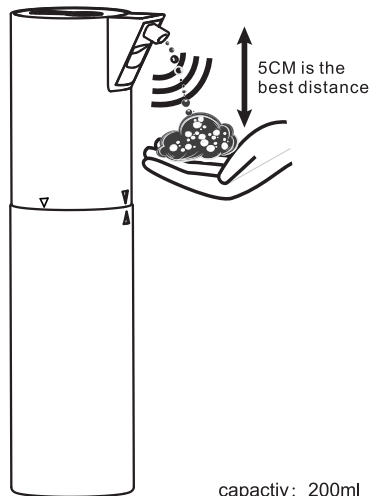

成分


This automatic soap dispenser makes it easier than ever to maintain high standards of hygiene when washing your hands.

An electronic sensor ensures that the soap is automatically pumped out without having to touch the dispenser.

产品功效

1. Please rotate the cover on the bottom of the product. Insert 4 AAA 1.5V batteries and then close the cover.
2. Press the button on the bottom. You will see the light is flashing. Now the device is normal working.
3. Open upper case on the body to add the liquid.
4. For the first time you use, please try a few times first. Then the foam will fill the hose and then will come out.
5. The distance between your hands to the sensor is around 5CM. Each time it will pump out around 0.5seconds. If you need more liquid, please hold on your hand and wait for around 2 seconds. Then more foam will come out soon.

使用方法

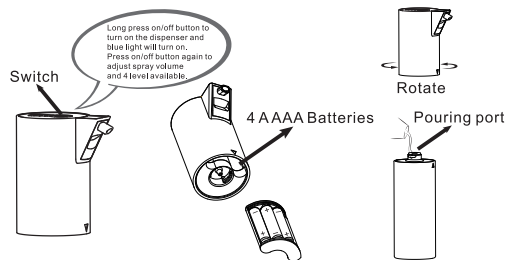

注意事项

Cautions

1. When the liquid level is low, please add liquid. Otherwise the dispenser will not pump out any foam.
2. When light is flashing, it means battery low. Please change the batteries.
3. Please do NOT shake the device to avoid any serious damage.
4. Please take out the battery if long time no use.
5. Please make sure the liquid cover is well mounted. Otherwise the foam will come out.
6. This device is designed for bathroom and kitchen.
7. Please do NOT place the device in water to avoid any damage.
8. Please do NOT place the device in direct sunshine to avoid any damage.
9. Normal working temperature is 3°C - 40°C.